

 
Twist & Pour
Technology



Warnings & Instructions

Product Box Contents:

- A. 1 Magnetic Snuffer Cap
- B. 1 Torch Head
- C. 1 Pole Section

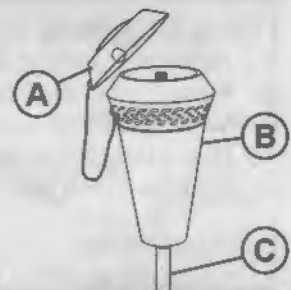

Save these Warnings & Instructions for future reference.

⚠ DANGER

Torch Fuel is harmful or fatal if swallowed. Contains petroleum hydrocarbons. Combustible.
Read Warnings on Torch Fuel bottle carefully.

⚠ WARNING

 


- Read and understand these instructions before use!
- For outdoor use only!
- Keep out of reach of children and pets.
- DO NOT leave a burning torch unattended.
- Hot while in use.
- To prevent burn injuries, snuff and allow to cool for 30 minutes before handling, refilling or cleaning.
- Failure to follow Warnings and Instructions may result in serious injury or property damage.
- DO NOT use gasoline or other flammable fuel. Use only TIKI® Brand torch fuel.
- DO NOT overfill. Remove excess fuel from bowl prior to lighting.
- DO NOT fill a burning torch.
- Before refilling, carefully place the Magnetic Snuffer Cap over the flame to extinguish.

⚠ CAUTION

- Keep clothing, hair and face away from flame.
- Do not place torch under covered shelter or umbrella, near pedestrian traffic or combustibles such as wood structures, fuel, clothing or dry vegetation.
- Insert Torch Pole into the ground a minimum of 8 inches until secure.

Torch stability depends on many conditions. TIKI® Brand products offer a variety of installation options for multiple backyard environments. For best results, select one of these recommended torch installation options.

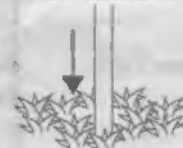

1. Into Ground



2. Torch Stand



3 Torch Stake

Torch Installation:

1. Do not place Torch under covered shelter or umbrella, near pedestrian traffic or combustibles such as wood structures, fuel, clothing or dry vegetation.
2. Insert Torch Pole into ground a minimum of 8" until secure.

Filling & Lighting:

1. Unscrew Torch Head From Pole (see FIG 2).
2. Remove Magnetic Snuffer Cap.
3. Wick should be exposed 1/2" (see FIG 3).
4. Grip Torch base and rotate the flame guard to open the fuel filler opening (see FIG 4).
5. While holding the torch base for stability, slowly fill Torch with TIKI® Brand Torch Fuel until Fuel reaches Fuel Level Indicator (see FIG 5). DO NOT OVERFILL.
6. Grip Torch base and rotate the flame guard to close the fuel filler opening (see FIG 4).

FIG 1

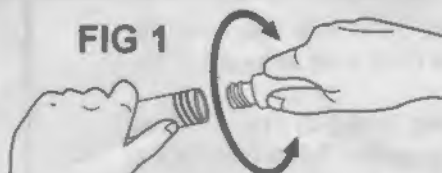 


FIG 2

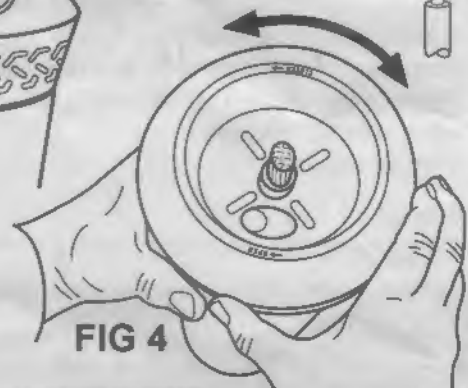 


FIG 3

1/2" (13 mm)



FIG 4



(cont'd on next page)

Filling & Lighting (cont'd from previous page)

7. Replace Magnetic Snuffer Cap.
8. Reassemble the Torch Head back onto the Pole (see FIG 6).
9. Wipe away any spilled fuel *before* lighting.
10. Use a long lighter or long fireplace match to light the Torch (see FIG 7).

Extinguishing:

1. Using the attached Magnetic Snuffer Cap, carefully place completely over Wick until flame is extinguished – **DO NOT BLOW OUT** (see FIG 9).
2. Allow to cool for 30 minutes before handling, refilling or cleaning.

Note: Leave the Magnetic Snuffer Cap on the Torch to prevent water contamination.

Note: If the Fuel becomes contaminated with water, the Wick and Fuel must be replaced and properly disposed of in accordance with local laws and regulations.

Refilling:

1. Remove Torch Head from Pole (see FIG 2).
2. Remove Magnetic Snuffer Cap.
3. Grip Torch base and rotate the flame guard to open the fuel filler opening (see FIG 4).
4. Fill Torch with TIKI® Brand Torch Fuel until Fuel reaches Fuel Level Indicator (see FIG 5). **DO NOT OVERFILL.**
5. Grip Torch base and rotate the flame guard to close the fuel filler opening (see FIG 4).
6. Replace Magnetic Snuffer Cap.
7. Reassemble the Torch Head back onto the Pole (see FIG 6).
8. Wipe away any spilled fuel *before* lighting.

Note: After the first burn, soot may prevent the flame guard from rotating freely. If this occurs, grasp the flame guard as shown on FIG.8 and push up gently. Release and rotate as needed for refilling.

Storage:

1. Store Fuel in original Fuel Bottle with Cap secured, and dispose of any unwanted Fuel in accordance to local laws and regulations.
2. Close the fuel filler opening (see FIG 4) and place the Magnetic Snuffer Cap on the Torch (see FIG 9). Store in upright position (see FIG 10).
3. For best results, store product away from the weather conditions when not in use.

Wick Replacement:

1. Carefully remove Wick from Torch. Properly dispose of Wick in accordance with local laws and regulations.
2. Replace Wick with TIKI® Brand Torch Wick and position Wick with 1/2" exposed (see FIG 3).
3. Trim as required.

Cleaning:

1. When not in use, wipe down with a damp cloth.

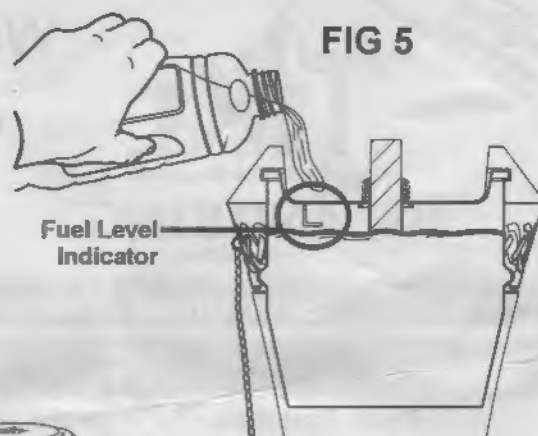 


FIG 6



FIG 7

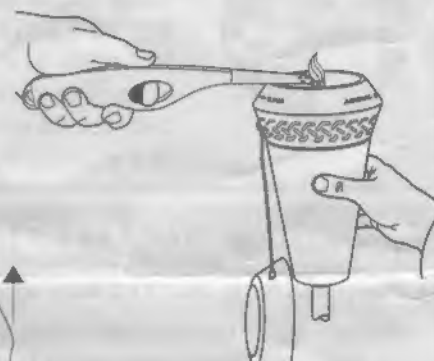 


FIG 8



FIG 9



FIG 10



©2013 Lamplight Farms Inc.

TIKI®, PARADISE IN YOUR BACKYARD®, ISLAND KING® & TWIST & POUR™ are trademarks of Lamplight Farms Inc.
W140 N4900 Lilly Rd., Menomonee Falls, WI 53051 • www.tikibrand.com

Designed & Engineered in Menomonee Falls, Wisconsin. Assembled in China. Patent Pending